



Series PCV Poppet Check Valve User Instructions

Scope:

These user instructions are applicable for Generant Series PCV, Poppet Check Valves sizes 1/8", 1/4", 3/8", and 1/2" (Connection Types NPT, Bi-Lok Tube)

Intended Use:

The intended use of these valves is to limit reverse flow in a given system. These products can be used with the following media, Inert gases, Oxygen and potential oxidizer gases > 21% and Hydrogen. When intended use is for Oxygen and oxidizer gases >21%, valves must be specified to be "Cleaned for Oxygen service" and will be supplied heat-sealed in poly bags. Proper seal material selection is important to insure compatibility with intended media.

Technical Data:

PCV Series Check Valves are 100% factory tested for leakage in the backflow direction. Series PCV Valves are marked with Manufacturer, Direction of Free Flow, Seal Material and Nominal Cracking Pressure. Operating parameters are listed below:

Maximum Operating Pressure: 3000 Psi (206 Bar)
Leakage in Check Direction: Zero @ >0.5 Psi Backpressure
Temperature Range: -80° F to 375° F Fahrenheit (elastomer dependent)
Nominal Cracking Pressures: 0.3, 1, 10 & 25 Psi (0.02, 0.07, .7 & 1.7 Bar)

⚠ WARNING Valves that are supplied "Cleaned for Oxygen Service" from the factory are supplied heat sealed in poly bags. Once removed from the bag, integrity of this cleaning has been compromised. Proper handling should be used to ensure the integrity and cleanliness of the system.

To make a proper connection:

1. All upstream piping and connection ports must be free from particulate contamination that is naturally generated during the assembly of the piping system. This should be accomplished by purging the system with clean, dry nitrogen gas. Visually inspect the port for cleanliness.
2. For use with NPT threads: Teflon tape should be used to seal the connection between the check valve and the piping system.
3. Beginning with the first thread, wrap tape in the direction of the male tapered thread spiral, and join with a slight overlap.
4. Make sure tape does not overhang the first thread, as the tape could shred and get into the system.
5. Cut off excess tape. Draw the free end of the tape around the thread tautly so that it conforms to the threads. Press in firmly at the overlap point. The connection is now ready for makeup. (If any additional pipe sealant is being used (i.e.: pipe dope or Swak). **Do not** apply it to the first thread of the valve.
6. Be sure to install the check valve with the free flow direction in line with the arrow. Thread the valve into the connection port hand tight. Using an open-end wrench, tighten the valve an additional ¼ to 1 full turn. Over tightening the valve may result in the valve failing to function properly.
7. For Tube Connections: follow installation instructions for Dual Ferrule Tube Fittings, per Generant Series "D" catalog.
8. The check valve connection should be tested for leaks using an oxygen-approved leak detector.

Safe Component Selection

When selecting a component, the total system design must be considered to ensure safe, trouble free performance. Component function, materials compatibility, adequate ratings, proper installation, operation, cleanliness and maintenance are the responsibility of the system designer and user.